

**Input formats**

CVBS: PAL, NTSC, SECAM with stereo audio input

YPbPr: 1080p@50/60Hz, 1080i@50/60Hz, 720p@50/60Hz, 576i/p, 480i/p with stereo audio input
















VGA: 640x480@60Hz, 800x600@60Hz, 1024x768@60Hz, 1280x1024@60Hz, 1280x720@60Hz, 1360x768@60Hz, 1440x900@60Hz, 1680x1050@60Hz, 1920x1080@60Hz with stereo audio input

HDMI: 1080p@50/60Hz, 1080i@50/60Hz, 720p@50/60Hz, 576i/p, 480i/p, 640x480@60Hz, 800x600@60Hz, 1024x768@60Hz, 1280x1024@60Hz, 1280x720@60Hz, 1360x768@60Hz, 1440x900@60Hz, 1680x1050@60Hz, 1920x1080@60Hz

USB: MPEG, H.264, RM/RMVB movie decode, JPEG, BMP, PNG  
Picture decode and MPEG1/2, MP3 audio decode

**Setting**

**Remote controller**

Power	Source	USB
		
Picture		Ratio
		
	OK	
		
Menu		Exit
		
Vol-	Vol+	Output
		

**Power:** Enter standby mode or re-enter normal mode

**Source:** Pop up source menu, press Up/Down button to select and press OK button to enter

**USB:** Enter USB source directly

**Picture:** Soft, Standard, Bright and Personal picture mode selection

**Ratio:** Adjust display ratio, -5% to +5% range can be set

**Navigation buttons:** Left, Right, Up and Down to navigate menu items or USB media files, press OK to enter

**OK:** Confirm and enter selection

**Menu:** Pop up main menu, press Menu button again to return

**Exit:** Close Menu or exit USB playback mode

**Vol-:** Decrease volume

**Vol+:** Increase volume

**Output:** Set 720p or 1080p output format

### Source menu

1. Press Source button to pop up source menu
2. Press Up/Down button to select source item
3. Then press OK button to enter

### Main menu

#### General control

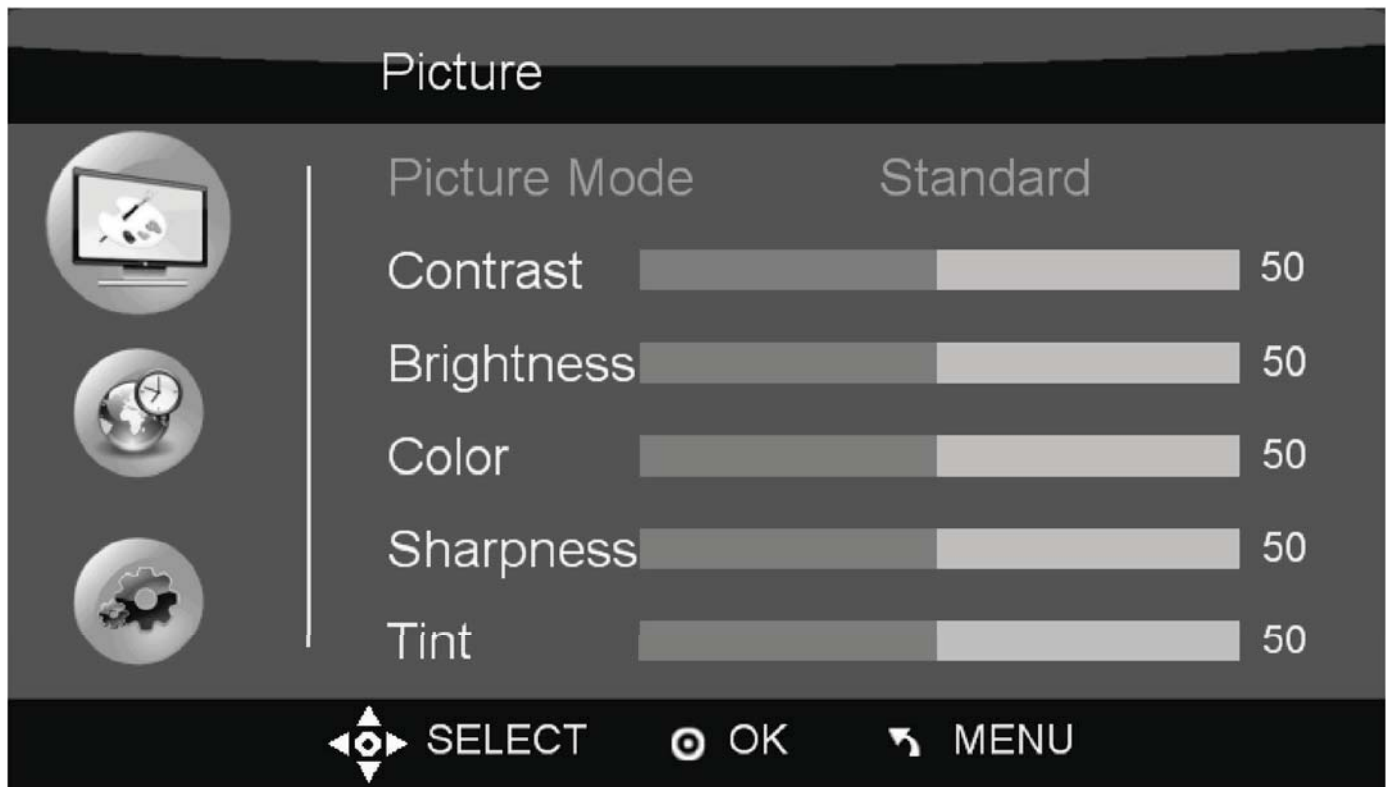 
1. Press Menu button to pop up main menu
2. Press Up/Down button to select Picture,



Geometry or Setting menu


3. Then press Right button to enter

### Control for Picture menu




1. Press Left/Right button to select Soft, Standard, Bright or Personal picture mode
2. Note that only Personal picture mode settings can be adjusted, others are pre-set modes
3. Press Up/Down button to select menu item
4. Press OK button to enter
5. Then press Left/Right button to adjust
6. Press Menu button to return, or press Exit button to close menu

## Control for Geometry menu

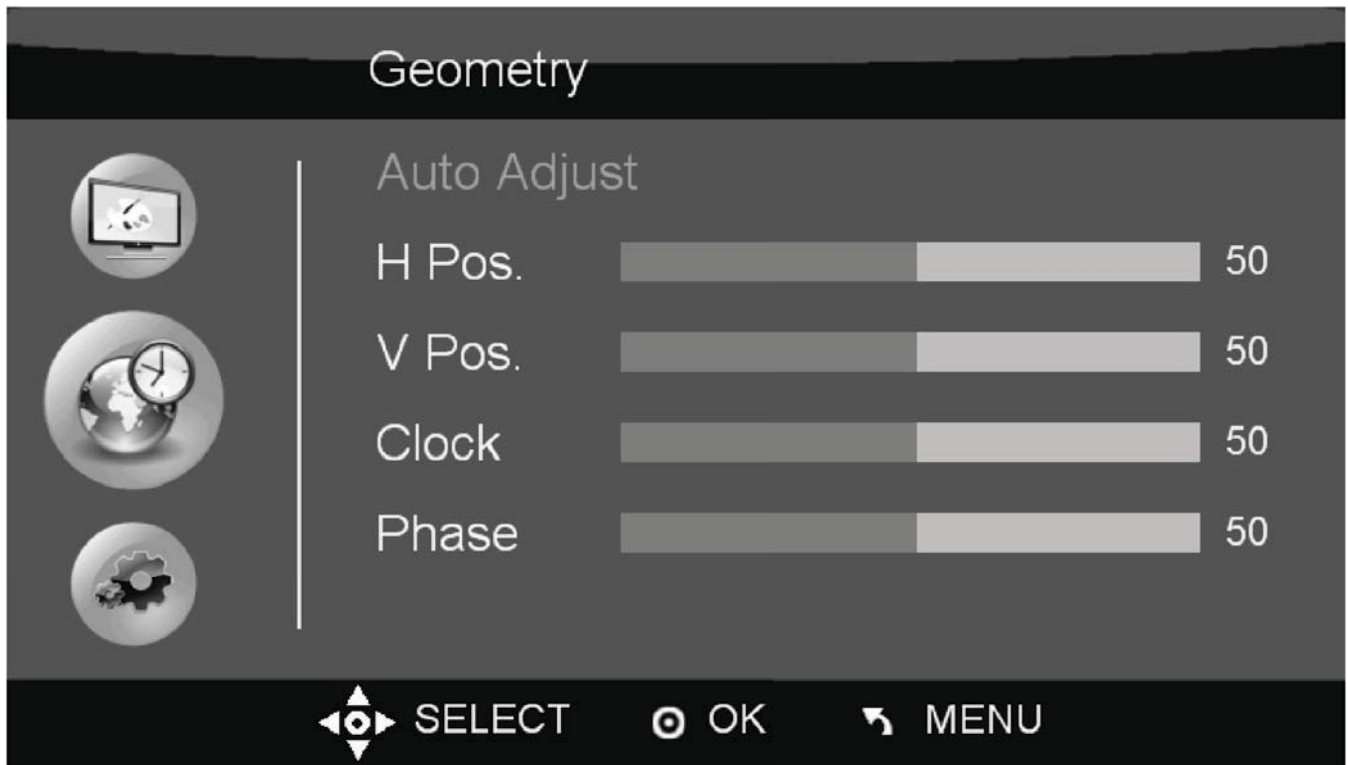 

1. Press Left/Right button to do Auto adjust
2. Note that Auto adjust will be done automatically when VGA source timing changed
3. Press Up/Down button to select menu item
4. Press Left/Right button to adjust
5. Press Menu button to return, or press Exit button to close menu

## Control for setting menu

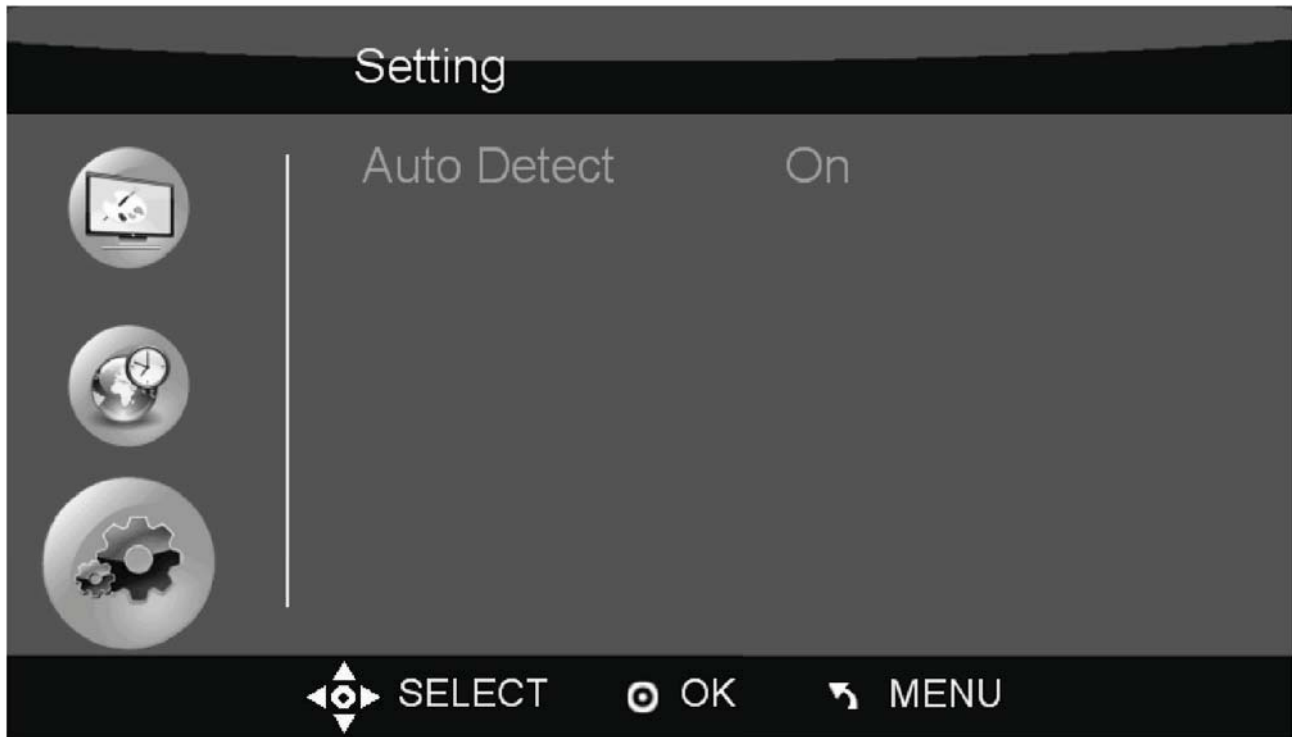 

1. Press Left/Right button to set Auto Detect function On or Off
2. Note that when Auto Detect is set On, the converter will automatically switch to the source which is connected with signal lately, except for USB source.

## USB menu


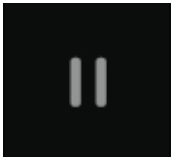 

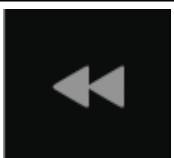 
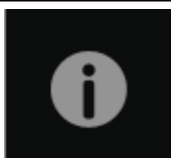 
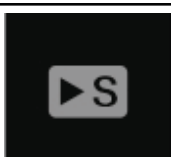 
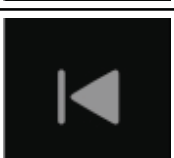 

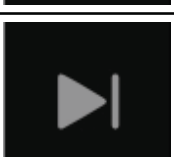 
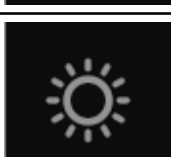 


### General control

1. Press USB button directly or select USB from source menu  
to enter USB device playback mode
2. Press Menu button to pop up  
media type selection menu

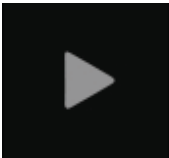 
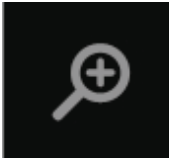 
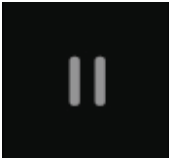 
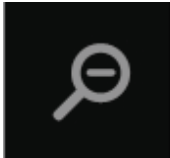 
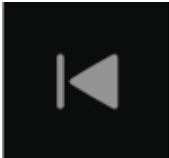 
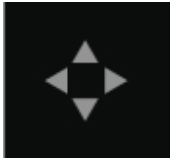 
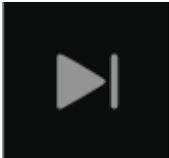 

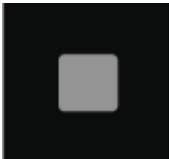 
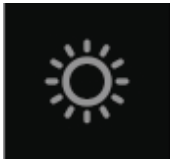 
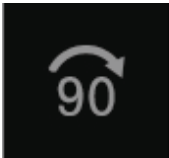 
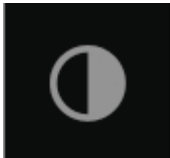 
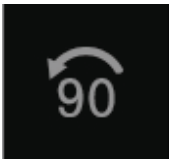 
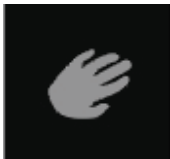 
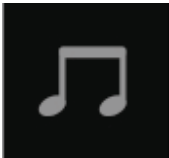 


3. Press Up/Down button to set which type of media to play
4. Press OK button to confirm
5. Press Left/Right to select USB device (disk alias)
6. Press OK button to browse media file
7. Press Left/Right/Up/Down button to select media file
8. Press OK button to play

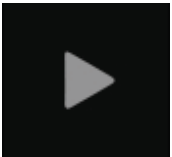 
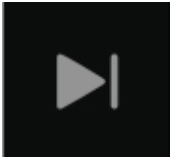 
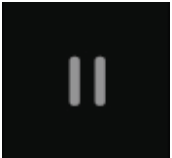 

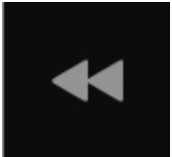 

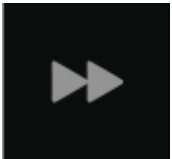 
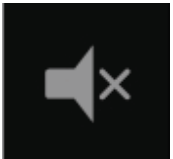 
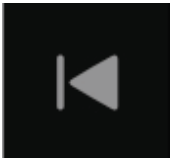 
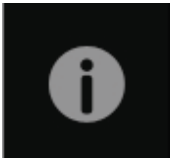 
### Movie playback control

	Play		Repeat
	Pause		Repeat A<->B
	Fast Backward		Media file information
	Fast Forward		Slow Forward
	Previous		Ratio
	Next		Brightness
	Stop		Contrast

## Picture playback control

	Slide show		Zoom in
	Pause		Zoom out
	Previous		Move
	Next		Repeat
	Stop		Brightness
	Rotate clockwise		Contrast
	Rotate anti-clockwise		Capture and save as logo
	Background music		

## Audio playback control

	Play		Next
	Pause		Stop
	Fast Backward		Repeat
	Fast Forward		Mute
	Previous		Media file information

## PACKAGE CONTENTS

Before attempting to use this unit, please check the packaging and make sure the following items are contained in the shipping carton:

- 1) Main unit (ALL TO HDMI CONVERTER BOX)
- 2) User Manual.
- 3) Remote control